

# Visible APC Red Laser Module APCD-650-27-10-A&B

6-2D-LM65-029 Rev.00

## Φ20 mm 650nm Laser Module

### Features

APC (auto power control) driver circuit  
High quality of glass lens  
Adjustable focus



### Absolute maximum ratings


Parameter	Symbol	Rating	Unit
Power supply voltage	V <sub>cc</sub>	6	V
Laser Module optical output power	P <sub>o</sub>	<10	mW
Operation temperature	T <sub>opr</sub>	0~50	°C
Storage temperature	T <sub>stg</sub>	-35~85	°C

### Electrical and optical characteristics (T<sub>c</sub>=25 °C)

Parameter	Symbol	Min.	Typ.	Max.	Unit	Conditions
Wavelength	λ		655		nm	P <sub>o</sub> = 10mW
Operation current	I <sub>op</sub>	-	-	50	mA	P <sub>o</sub> = 10mW ; V <sub>cc</sub> =3V
Optical output power	P <sub>out</sub>	8		10	mW	V <sub>cc</sub> =3V
Operation voltage	V <sub>op</sub>	3	-	6	Volt	

\* Sufficient heat dissipation is required for CW operation.

### Outline dimensions (Units: mm)

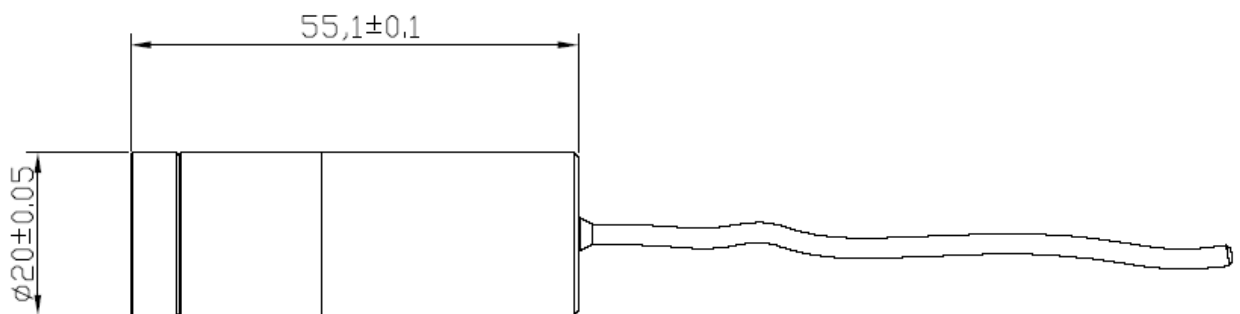

**Red wire : Vcc**

**Black wire : GND**

ARIMA LASERS CORP.

PHONE: 886-3-4699800 | FAX: 886-3-4699600

E-MAIL: Ldsales@arimalasers.com | www.arimalasers.com

For reference only. Contents above are subject to change without notice.


**Arima**  
LASERS

# Visible APC Red Laser Module APCD-650-27-10-A&B

6-2D-LM65-029 Rev.00

## Φ20 mm 650nm Laser Module

Instruction manual

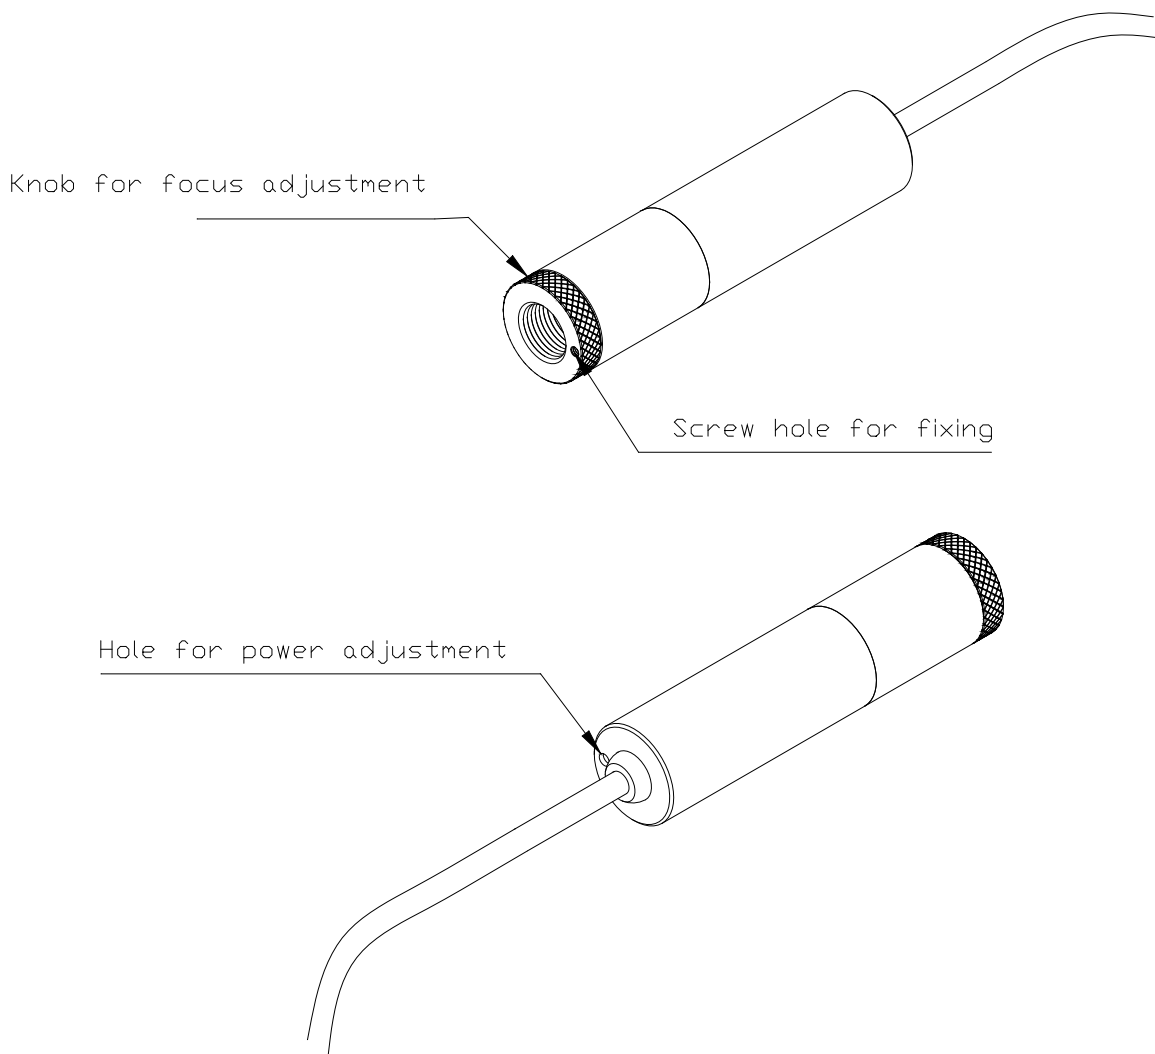

### ● Precautions

- \* Do not operate the device above maximum ratings. Doing so may cause unexpected and permanent damage to the device.
- \* Take precautions to avoid electrostatic discharge and/or momentary power spikes. A change in the characteristics of the laser or premature failure may result.
- \* Proper heat sinking of the device assures stability and lifetime. Always ensure that maximum operating temperatures are not exceeded.
- \* Observing visible or invisible laser beams with the human eye directly, or indirectly, can cause permanent damage. Use a camera to observe the laser.
- \* No laser device should be used in any application or situation where life or property is at risk in event of device failure.
- \* Specifications are subject to change without notice. Ensure that you have the latest specification by contacting us prior to purchase or use of the product.

### ARIMA LASERS CORP.

PHONE: 886-3-4699800 | FAX: 886-3-4699600

E-MAIL: [Ldsales@arimalasers.com](mailto:Ldsales@arimalasers.com) | [www.arimalasers.com](http://www.arimalasers.com)

*For reference only. Contents above are subject to change without notice.*

**Arima**  
LASERS