

## Φ3.3mm 850nm Laser Module

### Features

- APC (auto power control) IC inside
- Low current consumption of the APC circuit
- Much smaller LD module
- Surge current protection
- High quality lens for output beam



### Absolute maximum ratings


Parameter	Symbol	Rating	Unit
Power supply voltage	V <sub>cc</sub>	3.3	V
Laser Module optical output power	P <sub>o</sub>	<3	mW
Operation temperature	T <sub>opr</sub>	0~40	°C
Storage temperature	T <sub>stg</sub>	0~60	°C

### Electrical and optical characteristics (T<sub>c</sub>=25 °C)

Parameter	Symbol	Min.	Typ.	Max.	Unit	Conditions
Wavelength	λ	-	845	-	nm	P <sub>o</sub> = 3mW
Operation current	I <sub>op</sub>	-	-	40	mA	P <sub>o</sub> = 3mW ; V <sub>cc</sub> =3V
Optical output power	P <sub>out</sub>	2		3	mW	
Operation voltage	V <sub>op</sub>	2.5	-	3.3	Volt	
Laser Beam spot size at 10m				<20mm		
Divergence angle				2 mrad		

\* Sufficient heat dissipation is required for CW operation.

### Outline dimensions (Units: mm)

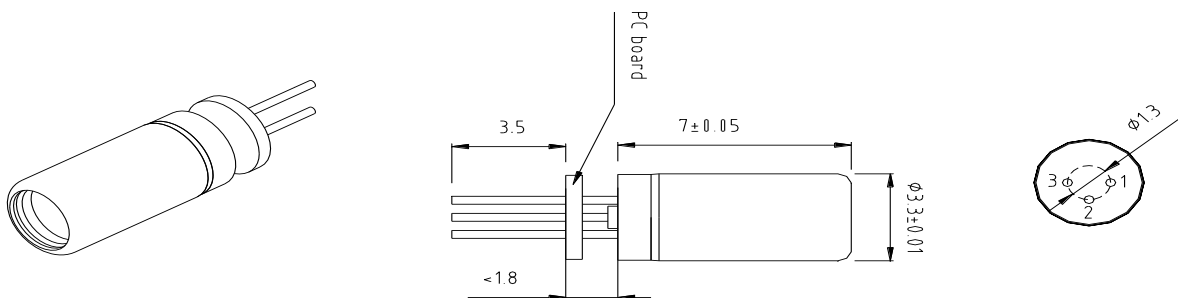


## Φ3.3mm 850nm Laser Module


### Instruction manual

#### DC Power connection mode 1


**A type** : Heat sink stand (-)

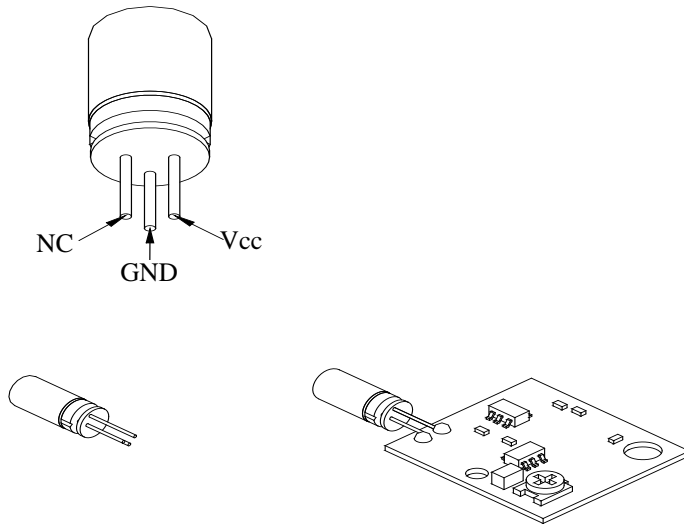

**B type** :Heat sink stand (+)

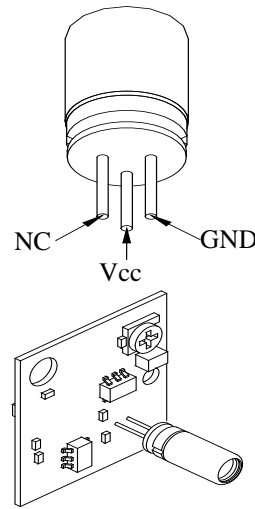

#### DC Power connection mode 2

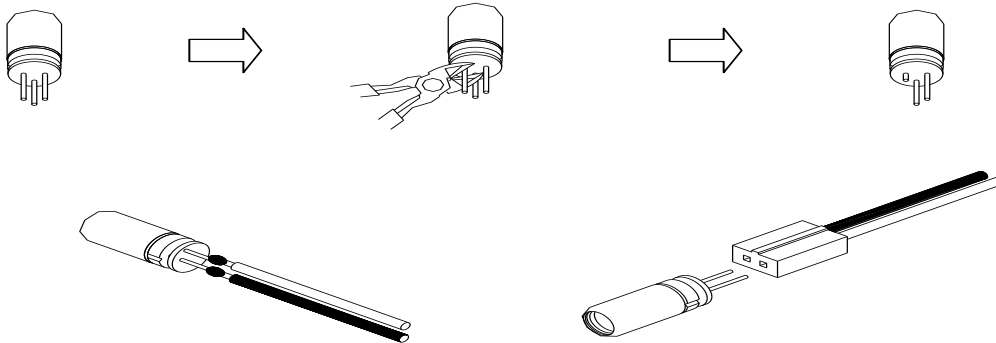

#### ● Precautions

- \* Do not operate the device above maximum ratings. Doing so may cause unexpected and permanent damage to the device.
- \* Take precautions to avoid electrostatic discharge and/or momentary power spikes. A change in the characteristics of the laser or premature failure may result.
- \* Proper heat sinking of the device assures stability and lifetime. Always ensure that maximum operating temperatures are not exceeded.
- \* Observing visible or invisible laser beams with the human eye directly, or indirectly, can cause permanent damage. Use a camera to observe the laser.
- \* No laser device should be used in any application or situation where life or property is at risk in event of device failure.
- \* Specifications are subject to change without notice. Ensure that you have the latest specification by contacting us prior to purchase or use of the product.

#### ARIMA LASERS CORP.

PHONE: 886-3-4699800 | FAX: 886-3-4699600

E-MAIL: [Ldsales@arimalasers.com](mailto:Ldsales@arimalasers.com) | [www.arimalasers.com](http://www.arimalasers.com)

*For reference only. Contents above are subject to change without notice.*